
ACORN


Design by
Thomas Housden

Dimensions
Ø17cm, h15cm

Weight
1.5kg


Lamp Type
Max 8w
Edison screw fitting
See website for more information

Wiring Certification
EU 9001

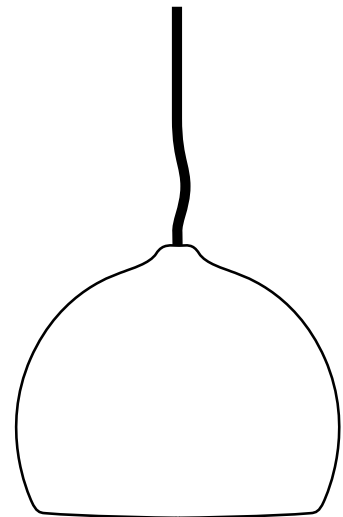

Hand & Eye Studio
37 Stewart Road
London, E15 2BA
T +44 (0)20 8522 0587
info@handandeyestudio.co.uk

Lamp Components

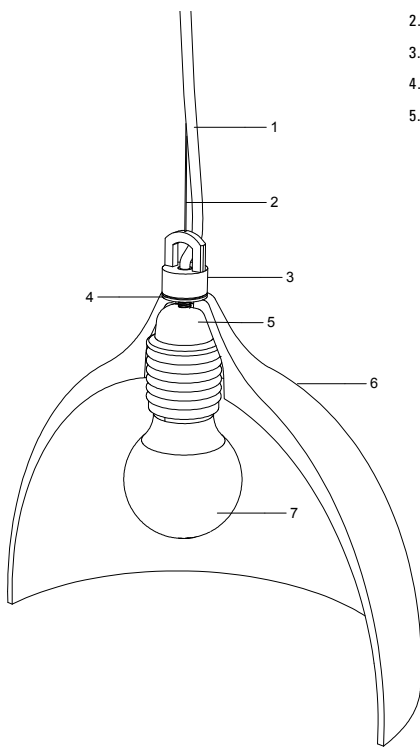

1. THREE CORE ELECTRIC FLEX WITH WOVEN FABRIC SHEATHING
2. TIMBER LAMP SHADE
3. RUBBER WASHER
4. LAMP HOLDER (Edison screw in)
5. SCREW IN LED BULB OF MAX 8W (not supplied)

- 1 Ensure all the provided electrical components are fitted to the lamp in accordance with diagram 1. Thread the flex (1) and the lamp holder assembly through the hole in the timber lamp shade (2).
- 2 Now connect the lamp flex (1) to the mains electric cables inside your ceiling rose. Use a standard off the shelf ceiling rose. Please contact Hand&Eye Studio for recommendations. Ensure all electricity is turned off at the mains switchboard. Consult an electrician.
- 3 As the lamp is made of timber it is very important that a low heat output lamp is used to prevent the timber from warping. Consult the website for recommended light bulbs.
- 4 The timber lamp can be cleaned with a damp cloth. For long term maintenance the timber can be sanded back using a fine grade sandpaper. The timber can be oiled (osmo oil) or lacquered.